



## LED Underbody Light Kit Installation Instructions




### Kit Contents:

- LED nerf bar underbody light assemblies (left & right)
- 3-volt accessory power supply
- LED power harness
- Power Y-harness
- 3x12mm cap screws (CS) (2)
- 3x15mm cap screws (CS) (2)
- Zip ties (4)
- Y-Harness Splitter

### Tools needed:

- 2.5mm hex wrench

Covers Parts #10998-BLUE, 10998-GRN, 10998-ORNG, 10998-RED

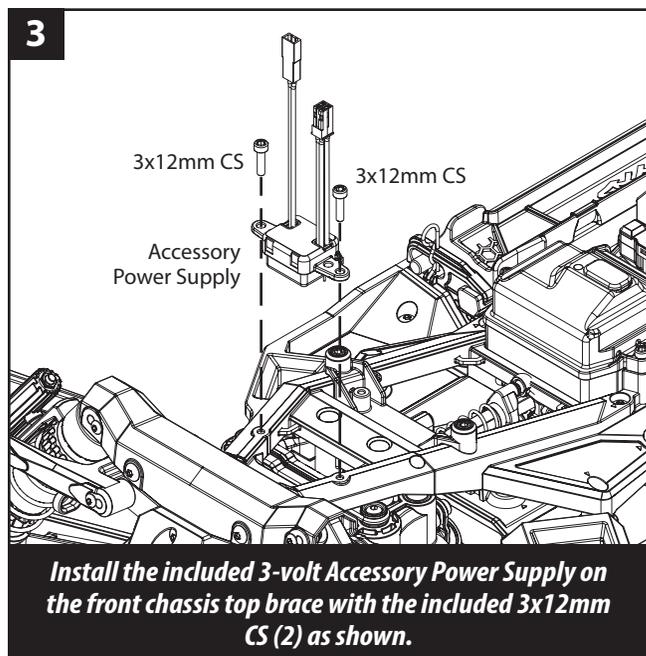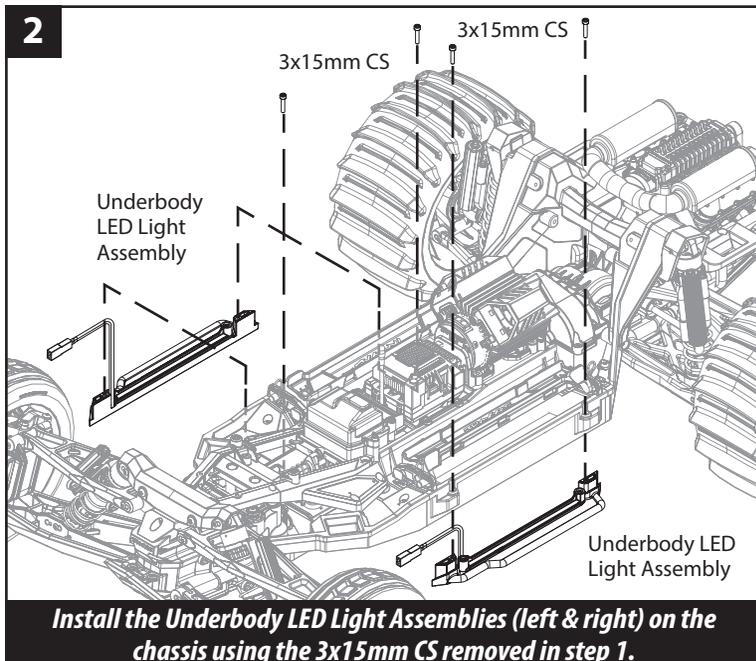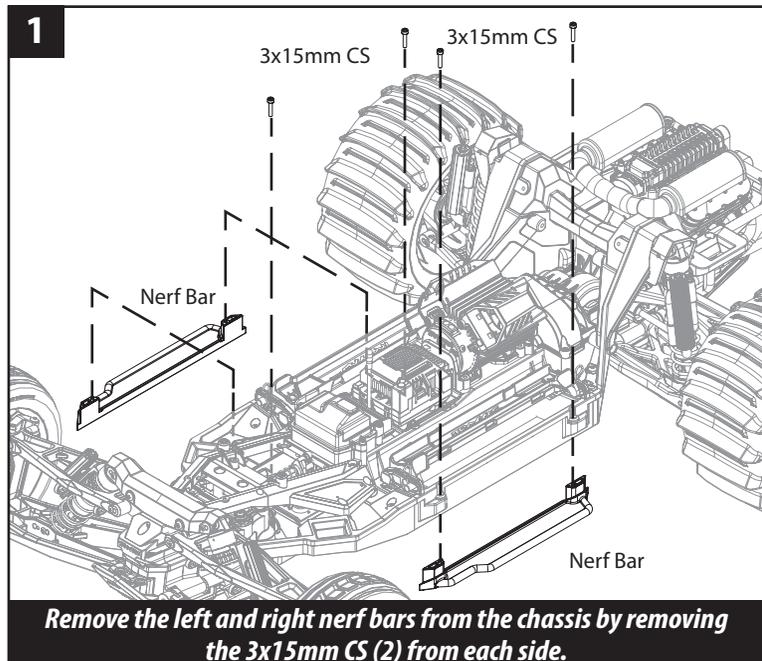

**Fig. A :** Plug the male connectors from the Accessory Power Supply into the female connectors from the underbody LED light assembly wires.\*

**Fig. B :** Use the included zip ties to secure the wires to the chassis in the locations shown.

**Note:** Ensure the wires are kept away from any moving parts and heated surfaces.

**Fig. C :** Plug the red male connector from the included LED Power Harness into the red female connector from the Accessory Power Supply.

**Fig. D :** Plug the other end of the LED Power Harness the included Power Y-harness.

**Fig. E :** Remove the connector from the CH1 port of the receiver (refer to the online Owner's Manual for instructions on accessing the receiver).

**Fig. F :** Plug the Power Y-Harness into the CH1 port of the receiver. **Do not use the RPM port.** Plug the previously removed connector from the CH1 port of the receiver into the Power Y-harness.

The accessory power supply and LED underbody lights will turn on when the electronic speed control is turned on. Always disconnect the battery when not in use

\***Note:** If you have already installed (or plan to install) the Shock-Mounted Underbody Lights (Part #10999), use the included Y-harness to leave one male connector from the Accessory Power Supply available for the Shock-Mounted Underbody Lights.

